


Components



1. **Power Button** – Turn on/off the device.

Button Operation

	Operations	Actions
	Turn On	Press and hold the button until “Welcome” message appears.
	Turn Off	Press and hold the button until Power-Off animation appears.
	Display Wake-Up	When the display is off, the first quick press of the button wakes up the display.

2. **Display** – Provides general information of the device status and device setting menu.
3. **Power Indicator Light** – White light blinks while the device is powered on.
4. **Navigation Buttons** – Left, Right arrows and Enter button to navigate the device menu.
5. **Type C USB Port** – The USB cable connects here to charge and data transfer.
6. **Vent Holes** – Ventilation holes to cool down the device.
7. **Battery Cover** – Battery is inside the battery cover.
8. **Battery Cover Notch** – Lift the notch to open the battery cover.

Device Display



Status Icon Bar

Icons	Status
	Shows network signal strength.
	Shows network type the device is connected to.
	Appears when the device is roaming on another network.
	Appears when the device is actively sending/receiving data to/from the network.
	Shows the number of connected devices on the Wi-Fi network.
	Shows SIM status (no SIM found, SIM PIN locked, SIM error)
	Appears when the USB port is tethering data.
	Appears when the USB port is connected to an Ethernet adapter.
	Shows the battery status.

Wi-Fi Information: Displays Main and Guest Wi-Fi Network SSIDs and Passwords.

Notification Display: Displays notification and alert messages as available.

Device Menu: Use the navigation buttons to navigate through the device menu icons to see device information or to change device settings.



Data Usage

Displays data usage information.



Devices

Displays connected device information.



Wi-Fi

Displays Wi-Fi network information.



Settings

Change device settings.




About

Displays device information.

Battery Management

Your RG2100 is equipped with a replaceable and rechargeable battery. It works from its charged battery alone or plugged into a power source.

Note: Please do not attempt to open or disassemble your mobile hotspot and the battery pack. Doing so may cause damage that voids your warranty.

Charge the battery with the charger provided together with your mobile hotspot. While the battery is charging, the battery charging icon  displays.

IMPORTANT! Please use only the approved charger to charge your mobile hotspot. Improper handling of the charging port, as well as the use of an incompatible charger may cause damage to your device and void the warranty.